2006-08 ENGINE PERFORMANCE

Catalytic Converter System - Civic GX

COMPONENT LOCATION INDEX

NOTE: Refer to the CATALYTIC CONVERTER SYSTEM (R18A1) article for additional information that is not shown in this article.

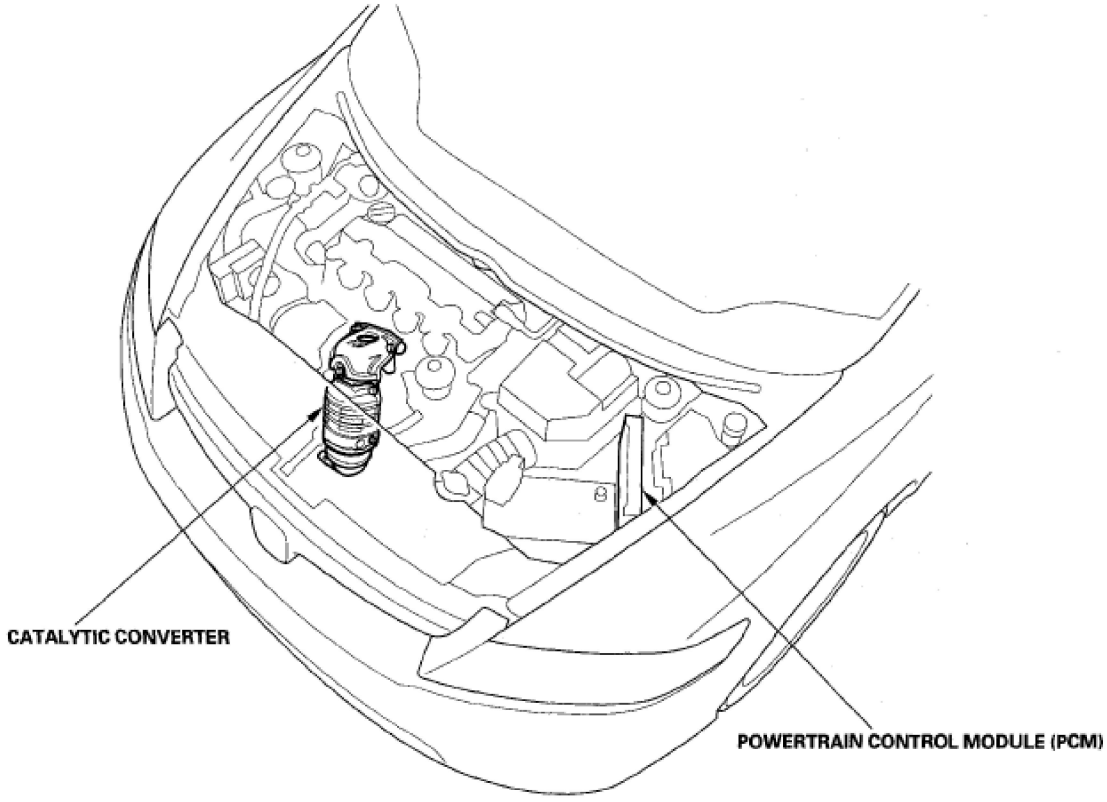

Fig. 1: Identifying Catalytic Coverter System Component Location

CATALYTIC CONVERTER REMOVAL/INSTALLATION

1. Remove the A/F sensor (sensor 1), refer to the **A/F SENSOR REPLACEMENT** .
2. Remove the secondary HO2S (sensor 2), refer to the **A/F SENSOR REPLACEMENT** .
3. Removethe cover (A).

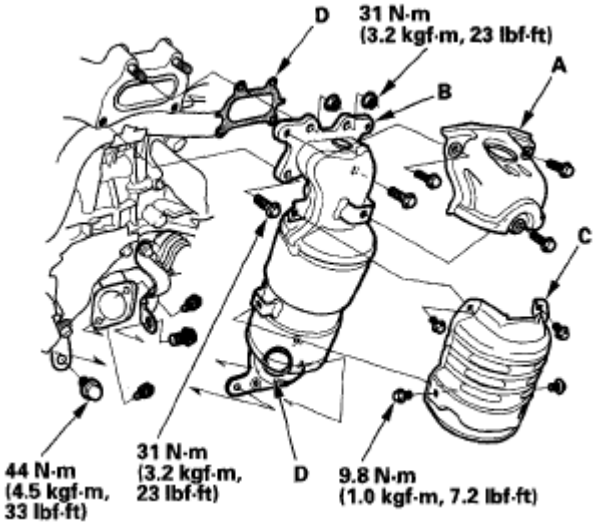

Fig. 2: Identifying Catalytic Converter Remove/Install Components (With Torque Specifications)

4. Remove the TWC (B).
5. Remove the converter cover (C).
6. Install the parts in the reverse order of removal with a new gaskets(D).